 


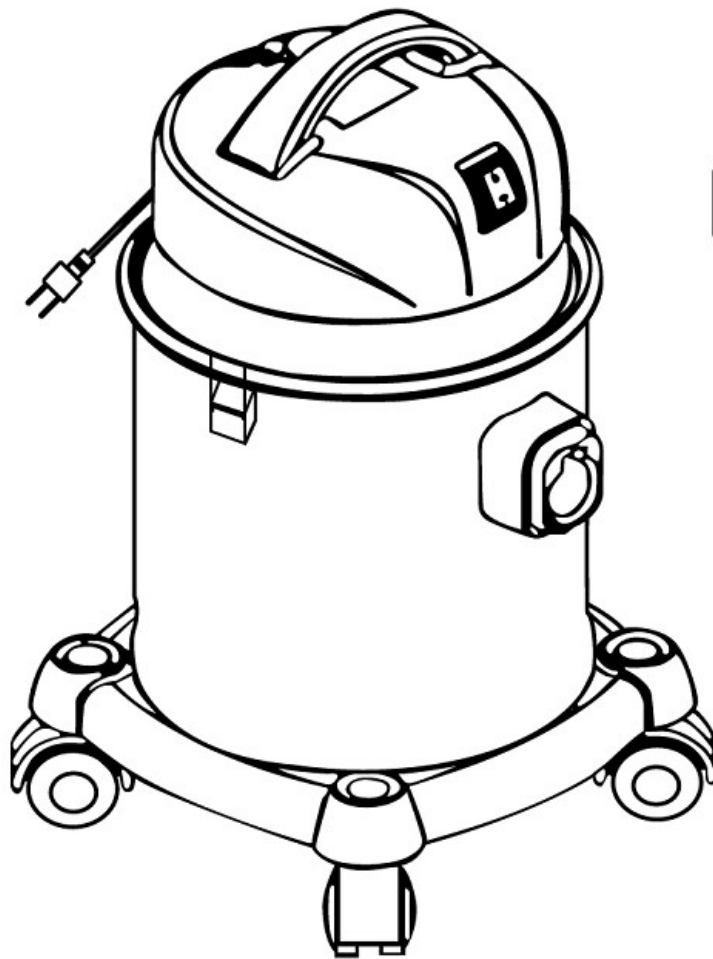

SHOWMASTER

WET / DRY VACUUM CLEANER FOR HORSE GROOMING

Instruction manual





www.kramer.com.uk

1 | PRODUCT FEATURES / TECHNICAL DATA

- 1 | Wet and dry vacuum cleaner
- 2 | Safety feature that ensures proper motor function
- 3 | Caddy frame provides space for accessories

Model	Power	Voltage	Frequency
WL60	1200/1400 W	220 V-240 V	50 Hz

2 | PARTS

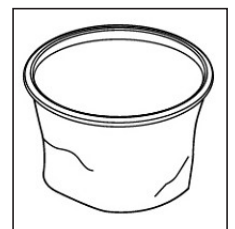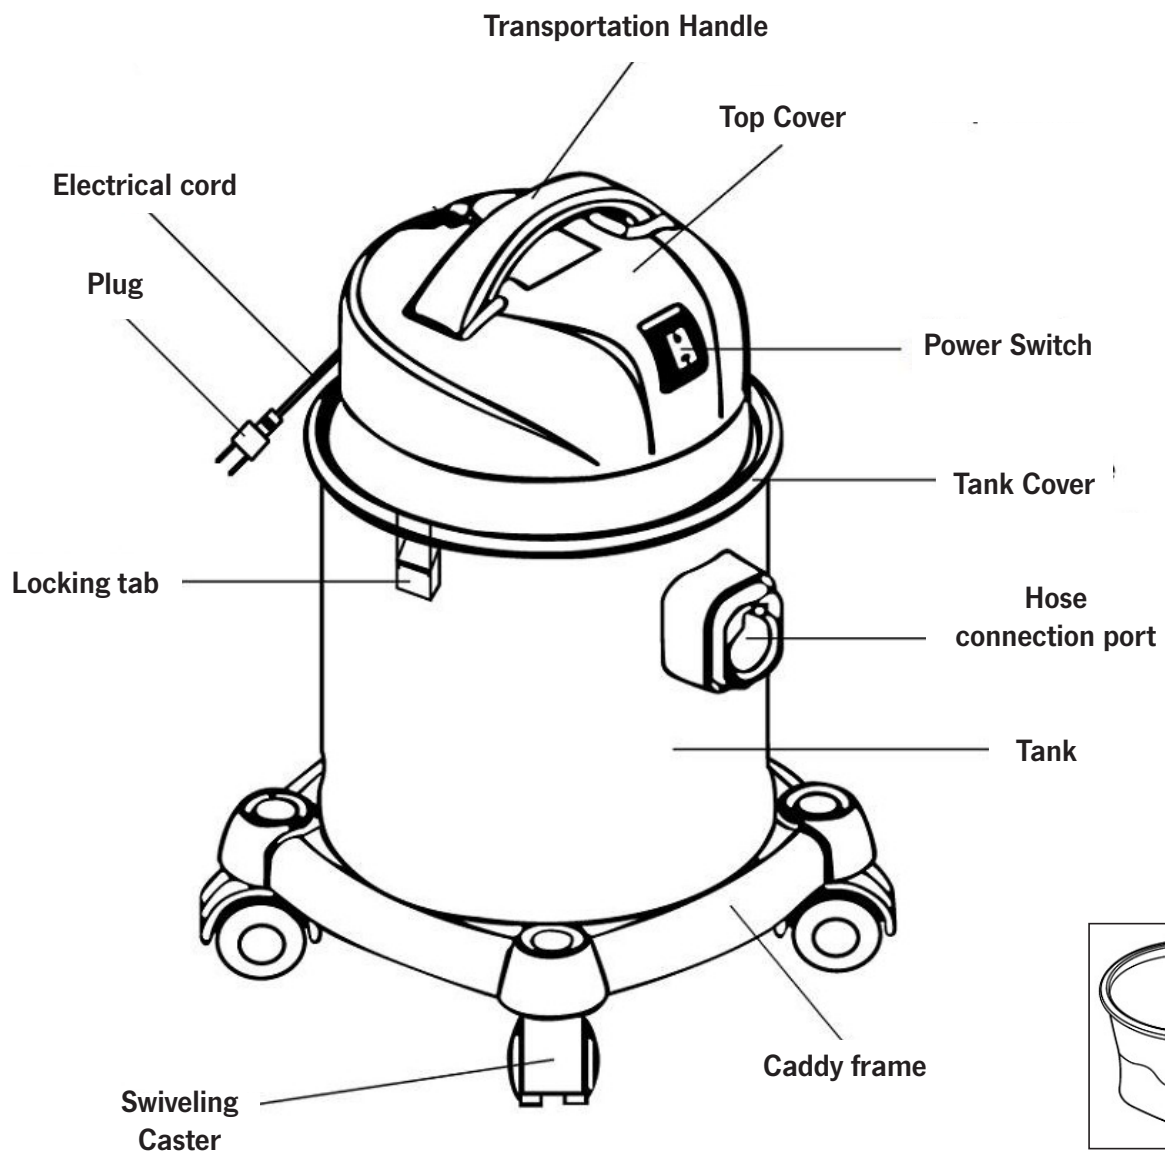  


Filter


3 | SAFETY INSTRUCTIONS

1 | Suitable for any 220 V socket. UK Plug adapter included.

2 | Do not operate in dangerous areas. The motor may emit sparks and cause fire.

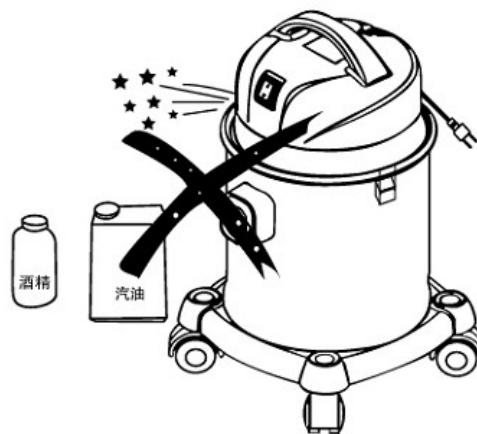 

3 | Do not allow the opening for the hose connection port to become blocked, as this could cause a rise in temperature and thus damage.

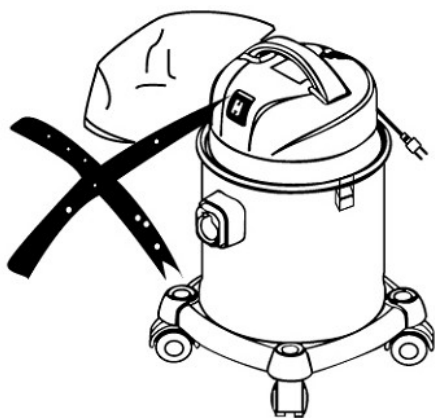 


4 | Do not suck up flammable and explosive objects such as lit cigarettes, petrol, etc.



* | Avoid sharp objects.




* | Do not suck up substances such as chalky powder, plaster and graphite dust. The filter could clog.

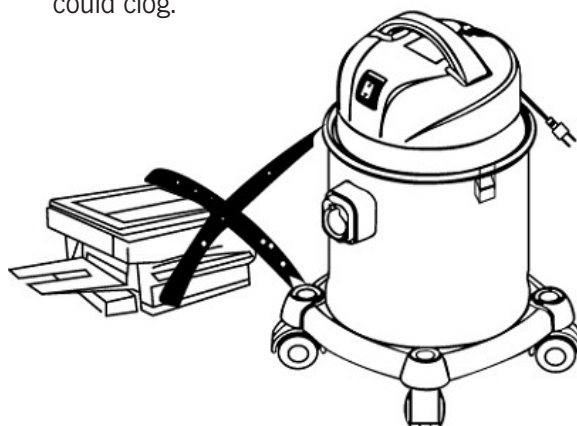

3 | SAFETY INSTRUCTIONS


5 | To avoid water damage to the motor, do not let the appliance tip over.

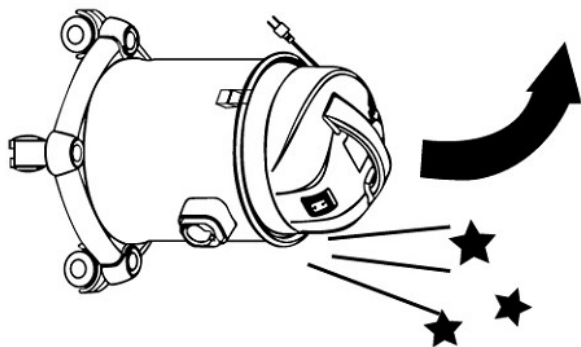

6 | **Warning:** If water leaks from the blower port, do not turn the unit over to repair it. Water could enter the motor and cause damage. Do not use this appliance as a pump.

7 | Switch the appliance off and disconnect it from the power mains after use or to carry out repairs.

8 | To avoid damage to plastic parts, do not leave the appliance in direct sunlight or anywhere where high temperatures are prevalent.

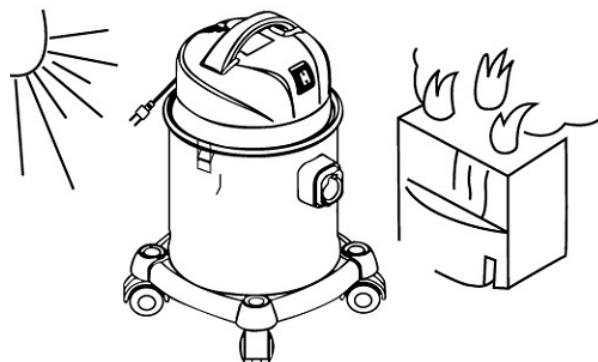




9 | Do not step on or pull on the hose.

10 | Do not immerse the tank lid in water or wash it, as water on electrical parts can cause harm to people. To clean, wipe with a slightly damp cloth.

4 | BEFORE YOU START

Always assemble the individual parts as shown in the illustrations.

Push the end of the hose connection into the hose connection port on the side of the tank.

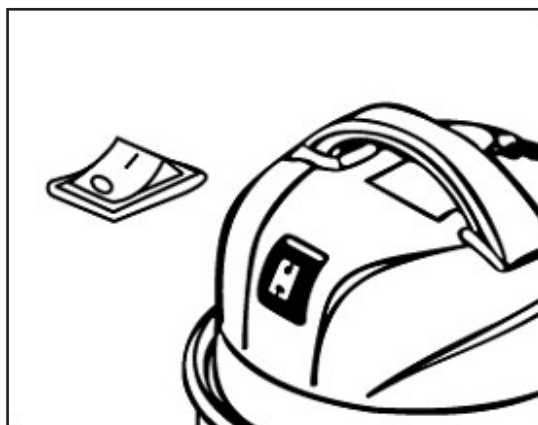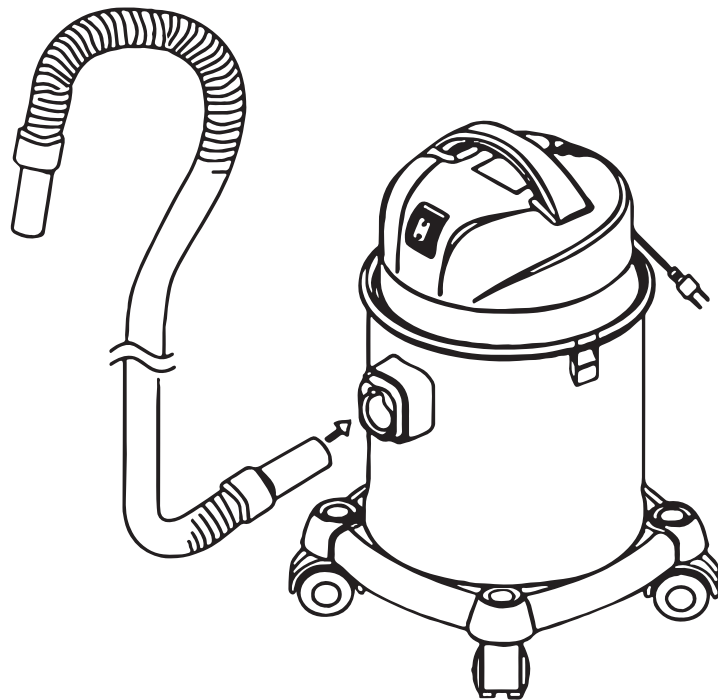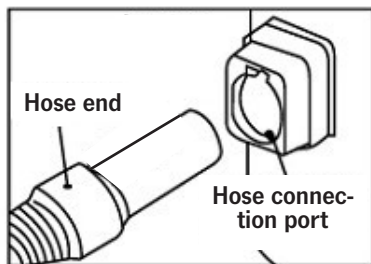

- 1 | Connect the plug to the mains.
- 2 | Press the switch to turn on.

„I“ Indicates switched on.
„O“ Indicates switched off.

5 | SAFETY FEATURES

- 1 | As soon as the tank is full of water, the safety feature is activated. At this moment, the suction force decreases and the appliance produces a sound to indicate that it is full. If this happens, switch off the power and empty the tank of water. Then switch the appliance back on.
- 2 | Should the appliance tip over, the safety feature will start. Please switch off the power and set the appliance upright again. Switch the appliance back on.
- 3 | If this safety feature is still in operation and the appliance is still in use, the appliance could overheat thus resulting in damage such as fire. In this case turn off the appliance and empty the canister. The appliance is once again ready for use.

6 | MAINTENANCE

1 | Cleaning the tank

* After using the appliance or when the tank is full, the power should be switched off and the tank emptied.

- 1 | Open the locking clips and remove the top cover.
- 2 | Pull out the filter bag and remove the dust.
- 3 | Re-insert the filter bag and attach the top cover.

2 | Cleaning the filter bag

When the filter bag is dirty, it should be washed with clean and warm water. If necessary, a light detergent can be used.

- 1 | Remove filter
- 2 | Wash
- 3 | Allow to air dry thoroughly

